


## Guide to the Use of the T6360B1036 Room Thermostat

### What is the purpose of a room thermostat?

The purpose of a room thermostat is to control the temperature of the Heating when the programmer/timer allows it to be switched on. The Hot Water will not be affected in any way.

### How do I set a room thermostat?

1. Make sure the Heating is turned on at the timer/ programmer.
2. Turn the room thermostat dial to set the room to the temperature you require. Line the temperature you require on the dial up with the line at the top of the dial.
3. The indicator light will be lit up when the Heating is on and off when the Heating is off. You will also hear a click when you turn the dial, this indicates the room thermostat is changing the Heating temperature.

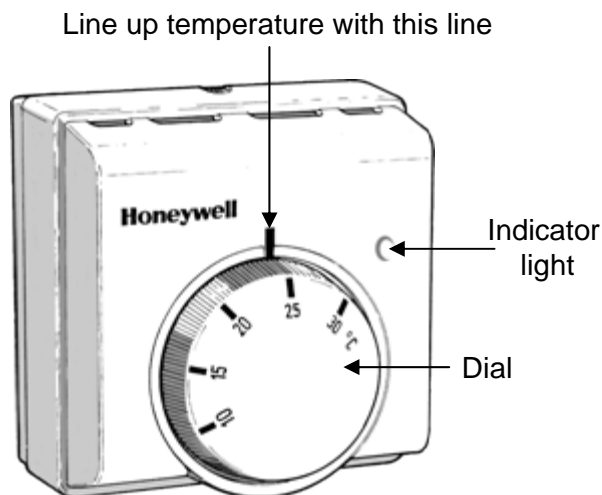

### Why has the indicator light not switched on?

If you turn the dial up to a higher temperature and you hear a 'click' but the light does not come on, this usually means that the timer/ programmer is switched off, or the Heating is programmed to be off.

### How do I save money and energy with a room thermostat?

By turning your room thermostat down just 1°C you will make an energy saving of 10%\*. Your fuel bill will therefore be reduced by 10% too.

\*Energy Savings Trust



[honeywelluk.com](http://honeywelluk.com)

**Honeywell**

This user guide is for guidance only and at the time of production represented the latest information available to Honeywell from various sources. Honeywell reserves the right at any time and without notice to change any product, specification or any other information contained in this publication and cannot accept any responsibility for loss or damage arising out of any errors that may inadvertently be contained herein.

EN2H-2102 UK01 R0915